
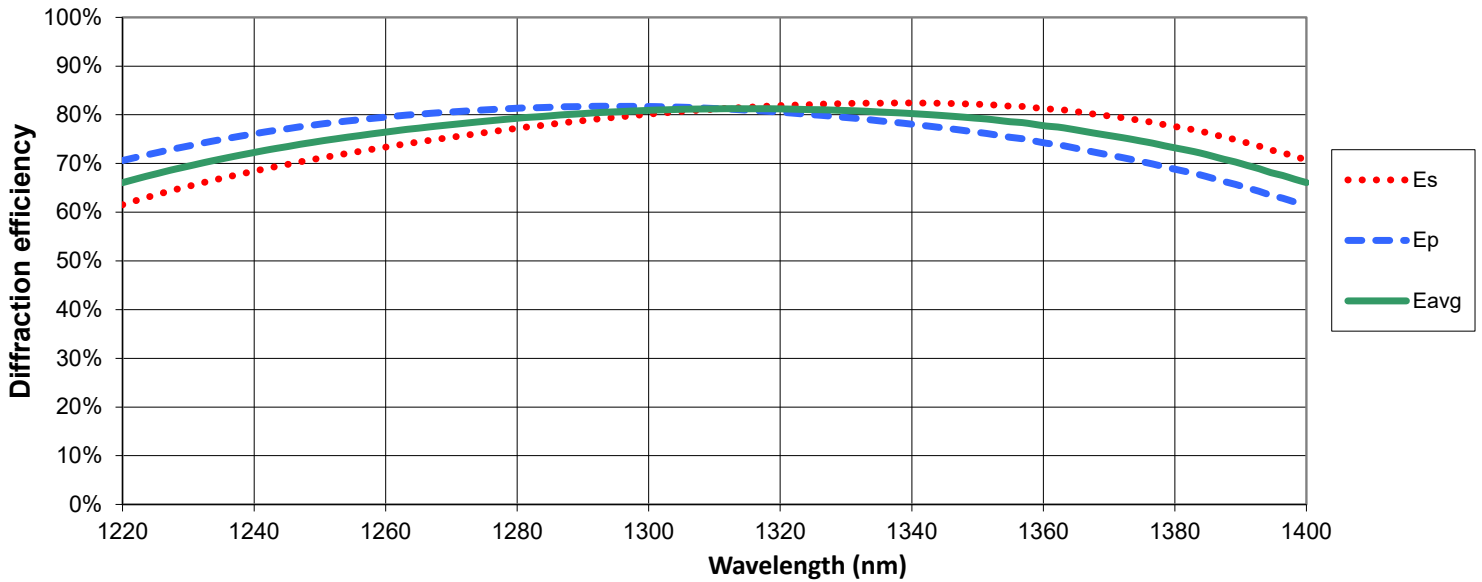
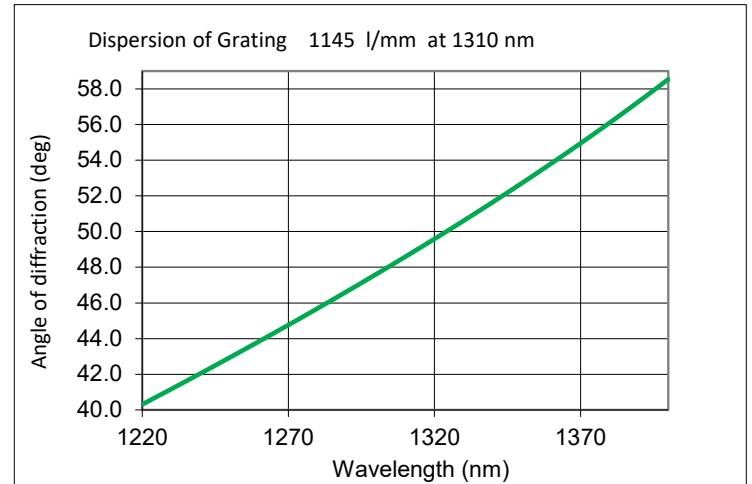
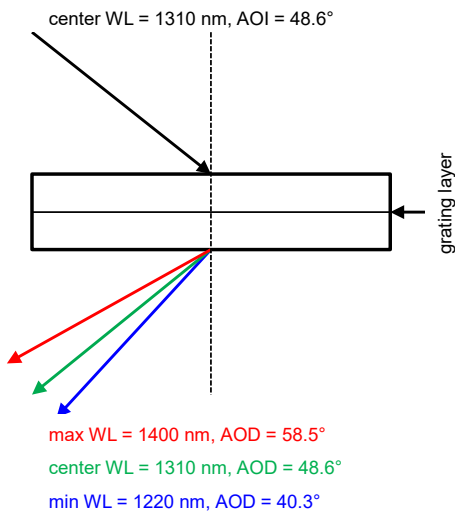


1st Order Diffraction Efficiency, HD 1145 l/mm @ 1310 nm


Diffraction efficiency curves are theoretical. Actual performance will vary slightly.
 Includes: glass absorption data, adhesive absorption data, film absorption data, manufacturing tolerances.

Specifications HD 1145 l/mm @ 1310 nm	
Spatial Frequency	HD 1145 l/mm +/- 1 l/mm
Wavelength Range	1220 to 1400 nm
Center Wavelength	1310 nm
Angle of Incidence	48.6°
Dimensions	25.4 mm dia +0/-0.15 mm
Thickness	6 mm +0.25/-0.25 mm
Clear Aperture	20 mm dia +1/-0 mm
Polarization	Average of S and P
Surface Quality	60/40
Substrate	N-BK7 or equivalent
AR Coating	Yes
Grating Lines	Indicated by Mark on Edge
Wavefront	$\lambda/5$ RMS at 633 nm over CA

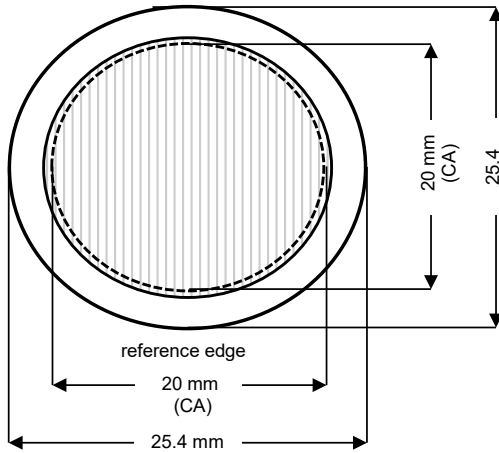

Cleaning, Handling, and Storage

Wasatch Photonics' Volume Phase Holographic Gratings, whether they are AR coated or not, can be easily be cleaned just as you would any other glass optic to remove fingerprints, dust, and contaminants. Use the standard optics cleaning method of "drop and drag". Gently wipe the grating with a clean, lint-free cloth/wipe using acetone or alcohol without much pressure; reagent-grade methanol or Windex may also be used. Do not use polishing compounds, abrasive materials, etc. Hard rubbing with such chemical or polishing compounds may damage the AR coating. AR coated surfaces will pass the "Scotch Tape" test.

Gratings may be stored or used at temperatures up to 100C and in cryogenic conditions at less than 100K.