

# 1200 l/mm @ 830 nm

## VPH transmission grating for OCT



### PERFORMANCE BENEFITS

Excellent 1<sup>st</sup> order diffraction efficiency for greater sensitivity and faster scan rates

Superior uniformity over the full spectral band for better SNR and axial resolution

Minimal polarization sensitivity across wavelength

Low wavefront error to reduce roll-off

Robust, durable optic for easy cleaning & handling

Enables compact, transmissive optical designs

### Maximize your sensitivity and scan speed with our patented grating designs

The clearest, deepest spectral domain optical coherence tomography (SD-OCT) images require an optical design that covers a broad bandwidth with maximum signal to noise ratio (SNR). That's why we developed our OCT gratings to have high efficiency and low polarization dependence across the full operating wavelength range. Choose from our range of stock gratings, or draw on our expertise in OCT to design your ideal grating. Place our VPH gratings at the heart of your OCT spectrometer or system and achieve clearer images, faster.

Because light is precious




# VPH Grating: 1200 l/mm @ 830 nm

## STANDARD PRODUCT SPECIFICATIONS & OPTIONS

Standard sizes and specifications for this grating are shown below. Don't see what you need? Let our expert staff design and build a custom grating to meet the needs of your specific application and optical design.

	WP-1200/830-25.4
Center Wavelength (CWL)	830 nm
Spatial Frequency (lines/mm)	1200 l/mm +0/-0.5 l/mm
Operating Range	780 - 880 nm
Angle of Incidence ( $\theta_i$ )	29.9° @ 830 nm
AR coating	Optimized for the specified wavelength range & AOI
Surface Quality	120-100 scratch-dig
Diffraction Wavefront Error	$< \lambda/5$ rms @ 633 nm over 1" $\varnothing$
Substrate	B270
Chamfers	0.25-0.75 face width
Size	$\varnothing=25.4$ mm
Size Tolerance	+0/-0.15 mm
Thickness	6.00 $\pm$ 0.25 mm
Clear Aperture	20 mm

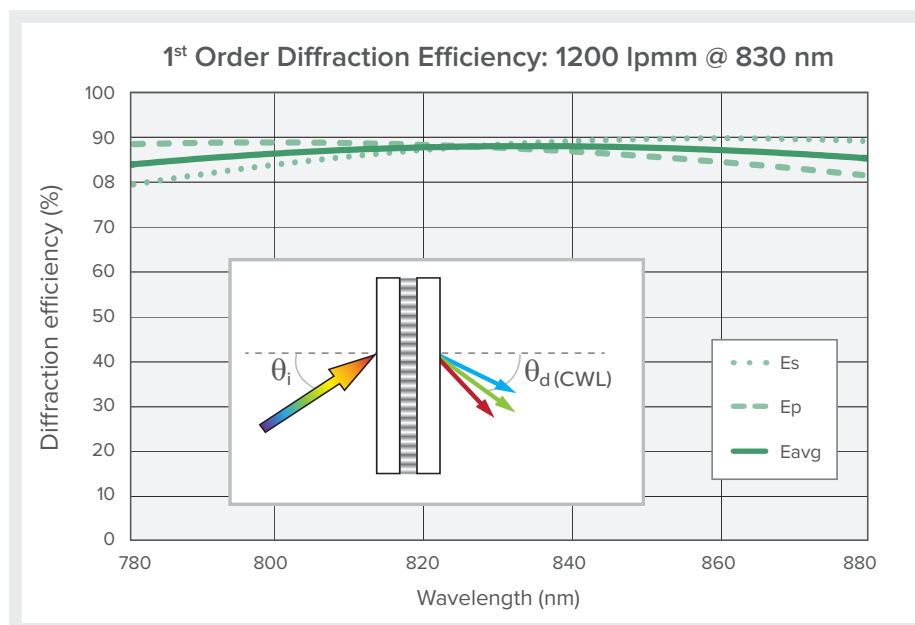

Customization available upon request

WP-PS\_1200lpmm-830nm\_RevA

